



Product Information Page

Central Heating Stove With
Solid Fuel



Tested according to DIN EN 13240

TF-25

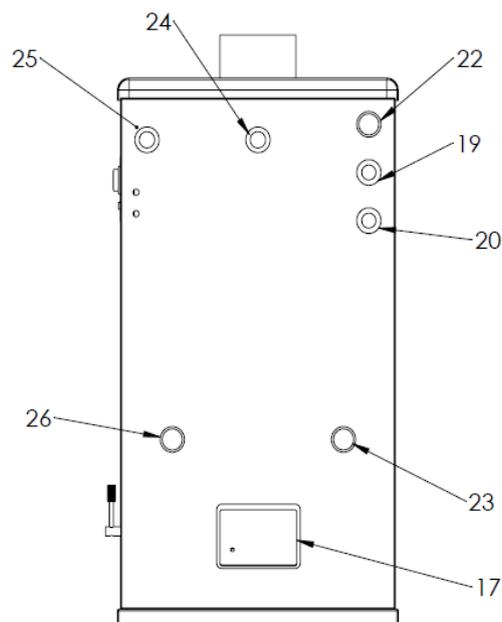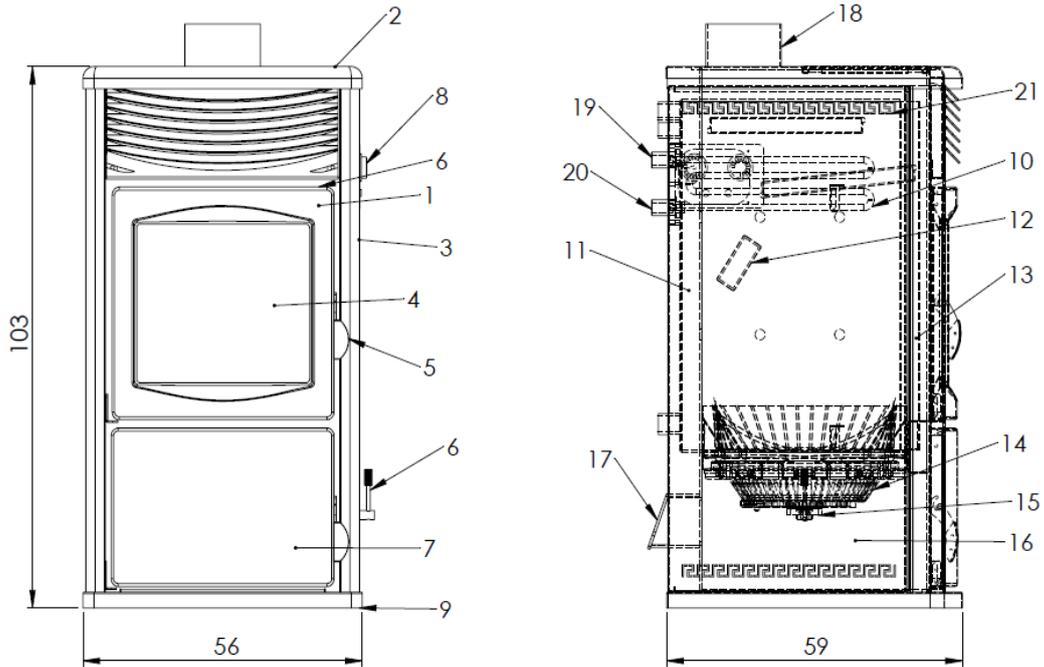

Explanation

Pos.	Explanation	Pos.	Explanation
1.	Stove Surface	14.	Grate
2.	Top Plate	15.	Ash Discharge Grid Material
3.	Lateral Sheat(1 mm)	16.	Ash Tray
4.	Flame Chamber Glass (Ceramic Glass)	17.	Mechanical thermostat vent cover
5.	Cover Handle	18.	Chimney connection
6.	Ash Discharge Handle	19.	Serpentine output
7.	Ash Chamber	20.	Serpentine input
8.	Digital	21.	Vent
9.	Bottom Plate	22.	Thermostatical Valve and Expansion Tank output
10.	Serpentine	23.	Radiator Cold Water Output
11.	Water chamber(back)	24.	Mechanical thermostat
12.	Water heating profile	25.	Radiator hot water input
13.	Water chamber(right-left)	26.	Sanitary water input

CAUTION!!!

To make sure that the radiator connection is done properly, make sure that you do this by authorized person. When a problem occurs because of the installation/connection, the responsibility belongs stove installer.

Suitable Fuels

The following fuels are suitable for your stove;

- Dry, natural wood,
- Wood brickets of standard DIN 5173;
- (6" and 7") coal brickets.

Mechanical Thermostat Adjustment

The mechanical thermostat needs to be set on 90°, when the stove is burned. The chain that is connected to mechanical thermostat and the air-vent cover permits to open the air-vent cover widely. Approximately, after 15-20 minutes (the stove will be hot enough). Then you can set the mechanical thermostat according to your needs. It should not be below 40°C, otherwise moist can occur in the flue pipe and clogge the pipes.

Fuel	Max. Fuel Quantity	Mechanical thermostat (Air passing through the grate)	Glass Cleaning Air - Condition
Wood:	3 - 4 Pcs of Wood (approx. 3,5 - 4 kg)	Set the temperature at desired level	open 
Coal:	4 - 5 Bricket (approx. 3,5 - 4 kg)	At least 10 -15 Max.(90C°) Later, set the temperature at desired level	open 